


◆ How to use the Software

Unzip the ZIP file and place its contents on your desktop or other location of your choice.

① Connect the foot switch to your computer.



② Double-click the icon.

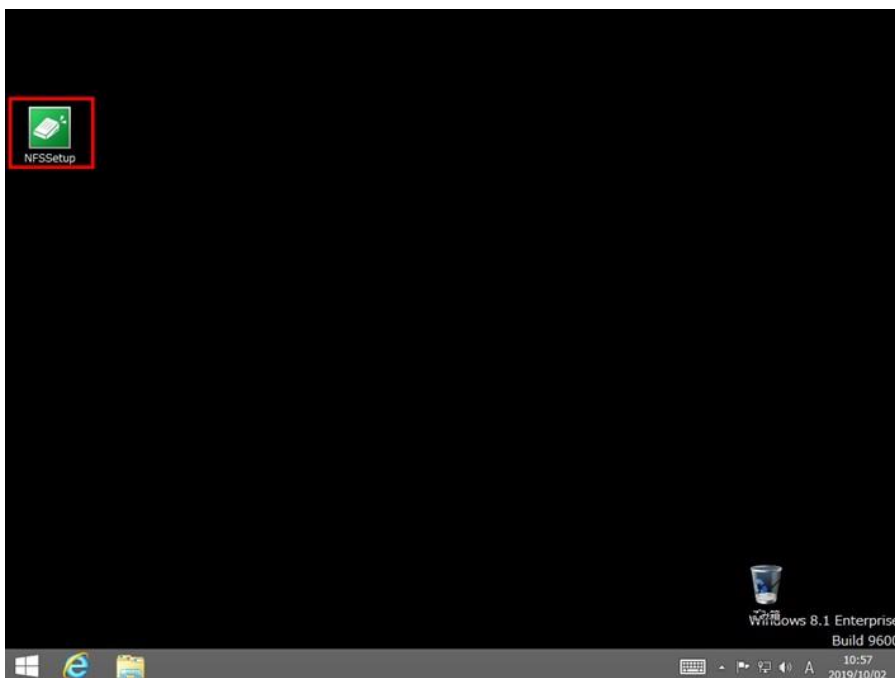

- ③ Select the key as you like and click the setting.
When the message "Written" is displayed, the setting is complete.



- ④ When you step on the foot switch, the key you set will be appeared.

